



OWNER'S MANUAL

VIBRATORY PAVER ROLLERS

BPR1080-4, BPR1080-5



4 ROLLERS



5 ROLLERS

www.BartellGlobal.com

CANADA

170 Traders Blvd E
Mississauga, Ontario L4Z 1W7
TEL (647) 953-4100 FAX (647) 953-4101

KENTUCKY

4701 Allmond Ave
Louisville, Kentucky 40209
TEL (425) 405-9100 FAX (425) 405-9101

UK

Honeyholes Lane
Dunholme, Lincoln, UK LN2 3SU
TEL 01673 860709 FAX 01673 861119

NEW JERSEY

200 Commerce Drive, Unit A
Freehold, New Jersey 07728
TEL (848) 225-8100 FAX (848) 225-8101

REV.	DATE	DESCRIPTION	APPROVED BY:
00	04/2021	Initial family manual release	AN
01	08/2023	Updated Logo's and Service Checklist	AN
02	04/2026	Transition to marketing ownership, translation	(in progress)

**ORIGINAL LANGUAGE OPERATING MANUAL FOR
BARTELL GLOBAL VIBRATORY PAVER ROLLERS**

© 2026 Bartell Global Inc.

No part of this work may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, or by any information storage or retrieval system without the prior written permission of Bartell Morrison Inc. unless such copying is permitted by federal copyright laws.

ADDRESS INQUIRIES OR REFERENCE PERMISSIONS CARE OF:

Bartell Global, 170 Traders Blvd E., Mississauga, Ontario, Canada, L4Z 1W7

SAFETY PRECAUTIONS



DANGER – EXPLOSION HAZARD

Never operate the machine in an explosive atmosphere, near combustible materials, or where ventilation does not clear exhaust fumes.



WARNING – BURN HAZARD

Never touch the engine or muffler when engine is operating or shortly after it is turned off. Serious burns may occur.



CAUTION – MACHINE DAMAGE

Never operate on hard, unyielding surfaces. Unwarranted damage may result.



CAUTION – MOVING PARTS

Before starting the machine, ensure that all guards and safety devices are in place and functioning properly.



ATTENTION – READ OWNER'S MANUAL

Read and understand owner's manual before using this machine. Failure to follow operating instructions could result in serious injury or death.

PERSONAL PROTECTIVE EQUIPMENT	
	Hearing Protection Wear earplugs or ear muffs to protect hearing from potentially damaging noise levels
	Eye Protection Wear eye protection to protect eyes from blowing dust and flying debris
	Safety Footwear Wear safety footwear to protect feet from falling objects, compression and punctures or cuts from surrounding and below
	Hand Protection Wear heavy or padded gloves to protect hands and arms from harmful effects of vibration

TABLE OF CONTENTS

<u>QUALITY ASSURANCE/ MACHINE BREAK IN</u>	<u>5</u>
<u>WARRANTY INFORMATION</u>	<u>5</u>
<u>SPECIFICATIONS</u>	<u>6</u>
<u>PREVENTATIVE MAINTENANCE AND ROUTINE SERVICE PLAN</u>	<u>7</u>
○ <u>ROUTINE SERVICE SCHEDULE</u>	<u>8</u>
○ <u>ROUTINE SERVICE INTERVALS</u>	<u>9</u>
<u>SAFETY PRECAUTIONS</u>	<u>10</u>
<u>OPERATION INSTRUCTIONS</u>	<u>13</u>
○ <u>EQUIPMENT SET-UP</u>	<u>13</u>
○ <u>PRE-OPERATION INSPECTION</u>	<u>13</u>
○ <u>OPERATION</u>	<u>15</u>
○ <u>STORAGE</u>	<u>16</u>
○ <u>MAINTENANCE</u>	<u>17</u>
<u>DECLARATION OF CONFORMITY</u>	<u>18</u>

QUALITY ASSURANCE/ MACHINE BREAK IN

The Bartell Global Paver Roller is the product of extensive engineering development designed to give long life and unmatched performance. They are shipped completely assembled, and only require engine oil and fuel in preparation for operation. The exciter housing is pre-serviced with oil at the factory.

You can help ensure that your Paver Roller will perform at top levels by observing a simple routine on first use. Consider that your new Paver Roller is like a new car. Just as you would “break in” a new car to the road, the same concept applies to new machines on a job site: start slowly, and gradually ease up to full capacity. Take a little time to get to know your machine, learn what it can (and cannot) do, and how it responds under a range of conditions.

Refer to the engine manual for specific run-in times. Full throttle and control may be used after the recommended period, as allowed by other factors, such as material, climate, etc. This will serve to acclimate the machine to your specific application, and provide you with additional practice using the machine.

We thank you for the confidence you have placed in us by purchasing a Bartell Global Forward Plate Compactor, and wish you many years of satisfied use.

WARRANTY INFORMATION

Bartell Global agrees to furnish without charge, F.O.B. our plant, a replacement for any part or portion thereof, comprising the main unit of the Bartell Global Vibratory Paver Roller, consisting of the exciter housing assembly, save and except drive belts, and power units, prove upon our examination, to be defective in either material or workmanship within a period of twelve (12) months from date of purchase, provided that notice of such defective part or portion thereof is given to Bartell Ltd. within the twelve month warranty period. No further or other guarantee or warranty expressed or implied in connection with the sale of the Paver Roller is given and our sole liability consists in replacing defective parts or portions thereof. We shall not be responsible for any special, indirect or consequential damages arising in any manner whatsoever.

This guarantee is for the sole benefit of the original purchaser as end user. Our responsibility under this guarantee ends in the case the original purchaser transfers ownership of the Vibratory Paver Roller, makes any changes or adds any parts or devices not of our manufacture to the Paver Roller machine.

SPECIFICATIONS

	BPR1080H-4	BPR1080H-5
Dimensions		
Overall Length, mm (in)	660 (26")	
Overall Width, mm (in)	548 (21.5")	
Overall Height, mm (in)	1220 (48")	
Roller Diameter x Length, mm (in)	83mm x 508mm (3.25" x 20")	
Weight		
Net Weight, kg (lb)	110 (243)	117 (258)
Operating Weight, kg (lb)	112 (247)	119 (262)
Performance		
Vibrating Frequency, Hz (vpm)	93 (5600)	
Centrifugal Force, lbF [kN (kgf)]	2381 [10.5(1080)]	
Power Source		
Manufacturer	Honda	
Model	GX160	
Max. Output, hp (kW)	4.8 (3.6)	
Engine Speed, rpm	3600	
Fuel Tank Capacity, US qts (L)	3.3 (3.1)	
Starting System	Recoil	

PREVENTATIVE MAINTENANCE AND ROUTINE SERVICE PLAN

This Bartell Global Paver Roller has been assembled with care and will provide years of service. Preventative maintenance and routine service are essential to the long life of your Paver Roller. Your dealer is invested in your success and wants to help you get the most value from it. After reading through this manual thoroughly, most owners find they can do some of the regular maintenance themselves. However, when in need of parts or major service, it is important to consult a trusted Bartell Global dealer.

When in need of parts or service, be prepared to provide the serial number and other relevant information. For your convenience, we have provided this space to record the data so it is easily referred to when you need it. Locate the serial number now and record in the space below.

Date Purchased:		Type of Machine:	
Dealer Name:		Model:	
Dealer Phone:		Serial Number:	

[illegible]

ROUTINE SERVICE SCHEDULE

Routine Service Intervals		Each Use	After first 1.5 months or 50 hrs	Each 3 months or 100 hrs	Each 6 months or 200 hrs	Each 9 months or 300 hrs	Each 12 months or 400 hrs
General Inspection							
Guards	Check	O					
Warning Stickers	Check	O					
Test Run	Check Operation	O					
Engine							
Engine Oil	Check level	O					
	Replace		O		O		O
Air Cleaner	Check, clean	O (1)	O	O	O	O	O
	Replace			O (1)			
Spark Plug	Check, adjust			O	O		O
	Replace					O (2)	
Air Intake Line	Check				O		
	Replace						2 yrs
Fuel Filter	Check, clean			O			
	Replace				O		
Idle Speed	Check, adjust					O (2)	
Valve Clearance	Check, adjust					O (2)	
Combustion Chamber	Clean						500 hrs (2)
Fuel Tank	Clean			6 mo or 100 hrs (2)			
Fuel Tube	Check						2 yrs (2)
Engine Wiring	Check						O
Exciter							
Exciter Oil	Check level	O					
	Change				O		O
Drive Belt	Check tightness	O					
	Change				O		O
Roller							
Bearings	Check			O			

(1) Service more frequently in dusty areas

(2) These items should be serviced by your servicing dealer unless you have the proper tools and are mechanically proficient. Refer to the Engine shop manual for service procedures.

ROUTINE SERVICE INTERVALS

Due to the nature and environment of use, plate compactors are often exposed to severe operating conditions. Some general maintenance guidelines will extend the useful life of your machine.

- The initial service for the compactor should be performed after 25 hours of use, at which time your mechanic (or authorized repair shop) should complete all the recommended checks in the schedule above. The chart on page 9 (nine) is handy for keeping a record of the maintenance performed and the parts used for servicing your equipment.
- Regular service according to the schedule above will prolong the life of the machine and prevent expensive repairs.
- Keeping your Paver Roller clean and free of debris is the single most important regular maintenance operation that can be performed, over and above the routine outlined in the schedule above. After each use, the compactor should be cleaned to remove any dust and debris from the undercarriage and surrounding components. Use of a power washer will make clean up quick and easy, especially if a non-stick coating was applied prior to use.
- In the Service Schedule above, items that should be checked, replaced or adjusted are indicated by “o” in the appropriate column. Not all Paver Roller models include the same features and options, and as such, certain listed service operations may not be applicable. For ease of recording, place a checkmark through the “o” when the item is complete. If an item is not required or not completed place an “x” through the “o” in the box.
- All Paver Rollers have governed engine speed of 3600 rpm. See engine manufacturer’s manual for exact specifications. Care should be used when making any adjustments to the Paver Roller not to change the governed engine speed. Running the engine at speeds outside of these specifications will result in a decrease of compaction force and lower travel speed. It will create excessive “out-of-synch” vibrations resulting in poor compaction, maneuverability, excessive wear to the machine, and operator discomfort.
- Failure to have your Paver Roller regularly serviced and properly maintained in accordance with the manufacturer’s instructions will lead to premature failure and void the warranty.

SAFETY PRECAUTIONS

Bartell Global Paver Rollers are equipped with safety guards in accordance with North American and International standards. The fully enclosed belt guard protects the operator from the main drive belt. The handle is equipped with independent vibration isolation from the motor plate, reducing operator discomfort and vibration related injuries.

IMPORTANT: NEVER attempt to disable or circumvent these safety devices. They are present for the operator's protection and any tampering will result in substantial risk to the operator and all present at the job site. If the safety devices have been tampered with, do not use the equipment. Immediately contact your sales representative to obtain replacement parts or return the machine to your dealer for repairs.

The instructions provided in this manual are done so to ensure the operator's safety as well as that of others, the equipment, and the job site. Failure to follow these guidelines can lead to serious personal injury and even death. The operator and any service personnel should read and understand the entire manual before working with or servicing any Bartell Global equipment.

- Print this manual, and always keep it accessible to any persons working with the machine. Replacement manuals can be downloaded at BartellGlobal.com or requested from your local dealer.
- Only use parts and attachments supplied or approved by your Bartell Global equipment manufacturer. The consequences of modifying the design of this equipment can include personal injury, equipment failure, and voiding your warranty. If you are unsure about a repair or an apparent malfunction, contact your Bartell Global dealer or the phone contacts listed at the beginning and end of this manual.
- Technical service bulletins, manual updates, and other information are posted at BartellGlobal.com. Check this website periodically for updates or other useful information about your equipment.
- NEVER use gasoline-powered equipment in an enclosed space with poor air flow, such as a basement or small room. The gasoline engine produces carbon monoxide gas and other toxic gasses. Without proper ventilation, this gas will build up and cause health effects such as organ damage and death to anyone in the vicinity.

- The Paver Roller operator must always be lucid and aware of their surroundings. NEVER operate the Compactor while under the influence of drugs, alcohol, fatigue, sickness, hangover, depression, emotional distraction, or medications/substances that may affect motor skills or judgment.
- ALWAYS wear the appropriate personal protective equipment (PPE) while operating a Bartell Global Paver Roller. This includes (but is not limited to) safety glasses, hearing protection, protective footwear, and heavy or padded gloves. Additional safety gear may be appropriate depending on jobsite conditions.
- NEVER leave equipment unattended while running.
- ALWAYS ensure that the operator has been properly trained prior to use.
- Children and small animals should NEVER be present during use.
- ALWAYS check the machine for loose or missing nuts and bolts before starting. Tighten any loose fasteners and replace missing or broken parts.
- Perform all routine maintenance as described within this manual. Failure to do so will void your warranty and will eventually result in premature equipment failure.
- NEVER perform maintenance while equipment is running. Shut down the engine and allow it to cool before servicing a Bartell Global Plate Compactor, including any mechanical work or lubrication.
- ALWAYS replace missing, damaged or unclear safety labels to ensure operator awareness and safety.
- NEVER operate a Bartell Global Paver Roller with missing or damaged safety guards. Replace immediately with appropriate parts.
- NEVER put hands, feet, or other appendages (even while wearing protective clothing) inside the belt guard or between the plate and bridge while the engine is running, even at idle, as serious injury may result.
- NEVER wear loose fitting clothing or jewelry near or while operating equipment as it may become entangled in the machinery, resulting in serious injury.
- NEVER refuel while the engine is running. Ensure the engine has cooled sufficiently before refueling to avoid igniting gasoline fumes.

- ALWAYS refuel the machine in a well-ventilated area, away from ignition sources such as sparks, flames, and lit cigarettes. Smoking while fueling the equipment may result in explosion.
- NEVER operate a Bartell Global Paver Roller in explosive environments, such as those where paint fumes, methane, natural gas, fine particulate, aerosol propellant, or solvent fumes are present.
- NEVER smoke nearby as stray gasoline fumes may ignite. Operating a Bartell Global Paver Roller around an open flame may result in explosion.
- ALWAYS shut down the engine and allow it to cool before lifting or transporting.
- ALWAYS tie down equipment when being transported in a truck or on a flatbed. Empty the fuel tank if transporting over long distances.
- NEVER attempt to lift a Bartell Plate Paver Roller alone, always lift with a mechanical aid.

OPERATION INSTRUCTIONS

INITIAL SET-UP

- Your Bartell Global Paver Roller may come fully assembled, with the handle and engine already installed. If the handle has been removed for shipping, it must be reinstalled before the equipment can be used. Assemble the handle using the included rubber vibration dampers, washers and bolts.
- Attach the throttle cable to the engine throttle and test the motion of the engine's throttle lever with the motion of the throttle control on the handle.
- Bartell Global Paver ROLLers are shipped with **no engine oil or gasoline**, so fill these fluids per your engine's instruction manual before proceeding.
- When starting an engine for the first time, or after a long period of storage, several pulls may be required before the engine runs.
- NEVER add fuel or oil while the engine is running. Shut down the engine and allow it to cool before opening the fuel cap for refueling. NEVER smoke while handling gasoline. If gasoline is spilled anywhere on or around the equipment wipe it up and allow the fumes to clear before starting the engine.

PRE-OPERATION INSPECTION

- Make sure that all dirt, mud, etc., are thoroughly removed from the unit prior to operation. Special effort should be given to the rollers on the bottom of the machine and the areas adjacent to the cooling air inlet of engine, carburetor, and air cleaner.
- Check all bolts and screws for tightness and make sure all bolts and screws are securely tightened. Loose bolts and screws may cause damage to the unit.
- Check the V-belt for tightness. The normal slack should be approximately 10-15mm (1/2") when the belts are forcibly depressed in the middle position between the two sheaves. If there is excess belt play, there could be a decrease in the impact force or erratic vibration, causing machine damage.
- Check the engine oil level and if the engine oil level is low, refill it as specified in the engine manufacturer manual. (Figure 1)



Figure 1

- Check exciter oil. Remove the oil plug and check the oil level. Make sure the machine is level when checking. The oil level should be up to the bottom of the oil plug. Refill with 10W30 (max volume is 5 oz / 150ml). Replace the exciter oil every 6 months / 200 hours of operation. (Figure 2)

IMPORTANT:

- When changing the exciter oil, drain oil by tipping the unit. The oil will drain easily while it is hot.
- Regular unleaded gasoline should be used in the engine. Use the fuel filter when filling the fuel tank.

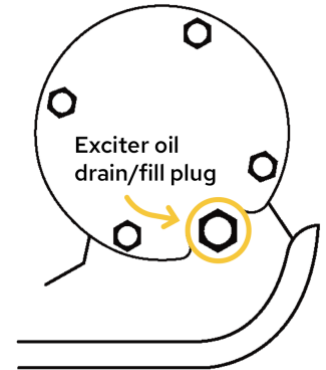


Figure 2

- Keep in mind, extreme seasonal temperatures may call for different oil weights. Consult the table below for general guidelines, and research best practice in your region.

Season	Temperature	Grade of Oil
Summer	25C or higher	SAE #30
Spring/ Fall	10C- 25C	SAE #30, #20
Winter	0C-10C	SAE#10

OPERATING PRINCIPLE

An eccentric weight mounted on the exciter shaft contained within the exciter housing is driven at high speed by a clutch and belt drive system. This high-speed shaft revolution causes the rapid vibration and compaction force of the machine. The Paver Roller is designed to run at an engine speed (engine take off shaft) of 3600 rpm. (Normally considered full throttle). Running the engine at lower rpm's will result in a decrease of compaction force and lower travel speed. It will create excessive "out-of-synch" vibrations resulting in poor compaction, maneuverability, excessive wear to the machine, and discomfort to the operator.

START-UP PROCEDURE

Fill fuel tank with clean UNLEADED GASOLINE ONLY, using safety-approved containers. DO NOT MIX OIL WITH GASOLINE.

Warm Climate: Open fuel valve on gas tank. Set throttle lever to "Fast" idle position. Set choke to closed position. Flip engine power switch to ON. Pull recoil start cable. Adjust choke to prevent flooding, moving it to "Open" or "Run" position as the engine warms up. Allow engine to idle for 2–4 minutes to circulate oil.

Cold Climate: Follow same procedure as above but allow longer warm-up period (3–5 minutes). In cold weather, oil is much heavier to move and requires more time to work its way into the moving parts. If maximum power is not attained, allow more time to warm-up.

When engine is warm, increase throttle to maximum operation position (3600 rpm).

OPERATION

- Push forward, or pull back on the handle to move the machine.
- Always keep the machine moving while it is working to prevent cracking of pavers.
- Bearing down on the handle is unnecessary and causes shock absorber wear.
- ALWAYS OPERATE THE MACHINE AT FULL THROTTLE.
- If excessive vibration is felt through the handle:
 1. Throttle down and shut down the engine.
 2. Do not operate until the engine is checked and set at its maximum running speed of 3600 rpm.
 3. Ensure the drive belt is adjusted properly. Refer to belt tension section.

SHUT-DOWN PROCEDURE

Throttle engine down, and flip engine power switch OFF.

STORAGE

The following steps should be taken to prepare the plate compactor for extended storage.

1. Close fuel valve.
2. Siphon excess gasoline from tank.
3. Run the engine until it stops from lack of fuel. This will use up all the fuel in the carburetor and prevent formation of deposits due to evaporation of fuel.
4. Remove spark plug and pour 2 oz. of SAE 10W-30 motor oil into the cylinder. Slowly crank the engine 2 or 3 times to distribute the oil throughout the cylinder. This will help prevent rust during storage. Replace spark plug.
5. Store the unit in an upright position in a cool, dry, well-ventilated area.

MAINTENANCE

Proper maintenance, inspection and storage of your Bartell Global Plate Compactor is vital to preserving the performance of your equipment. The most important daily activity is to keep the equipment clean and prevent the build-up of mud and caked-on dust or particulate. Clean with spray from a hose or pressure washer. Remove all dirt and residue from the surface of the equipment, including the space between the bridge and plate.

AIR FILTER

Keep the air filter clean at all times. Wash away dust and debris using a non-oil-based cleaning solvent. Let the filter dry before re-installing.

LUBRICATION

Check engine oil regularly. Refill and replace oil as recommended in the engine owner's manual (provided separately).

SPARK PLUG

Check and clean the spark plug regularly. A dirty or carbon-coated spark plug causes hard starting and poor engine performance. Set spark plug gap to recommended clearance. Refer to the engine owner's manual (provided separately).

BELT TENSION – IMPORTANT!

A loose belt will decrease the impact force and cause erratic vibration, which could damage the machine. The normal belt play should be 10-15mm (1/2") which is attained by depressing the top section of the belt at the belt guard mounting bracket location. When adjusting the belt make sure that the clutch is in alignment with exciter pulley. Tighten all engine mount bolts, adjust the two upper bolts, and tighten lock nuts.

DECLARATION OF CONFORMITY

Declaration of Conformity / Certificat de conformité / Gelijkvormigheids certificaat Declaración de Conformidad / Declaração de Conformidade / Dichiarazione Di Conformità

We: Bartell Morrison Inc.
170 Traders Blvd. E
Mississauga, Ontario, Canada
L4Z 1W7
Tel: 647-953-4100
Fax: 647-953-4101

Bartell Morrison (USA) LLC.
200 Commerce Drive
Freehold, New Jersey, United States of America
07728
Tel: 848-225-8100
Fax: 848-225-8101

Declare under our sole responsibility that the product to which this declaration relates is in conformity with the following standard(s) or other normative documents.

Déclarons sous notre responsabilité que le produit cette déclaration est conforme aux normes suivantes ou d'autres documents habituels.

Verklaren onder onze verantwoordelijkheid dat het product naar welke de verklaring verwijst conform de volgende standaards of anders gebruikelijke documenten is.

Declaramos bajo nuestra única responsabilidad que el producto en lo que esta declaración concierne, es conforme con la siguiente normativa u otros documentos.

Declara sob sua responsabilidade que o produto a quem esta declaração interessar, está em conformidade com os seguintes documentos legais ou normas directivas.

Dichiariamo sotto la ns. unica responsabilità che il prodotto al quale questa dichiarazione si riferisce, è fabbricato in conformità ai seguenti standard e documenti di normative.

EN 349:1993 – Safety of Machinery - Minimum gaps to avoid crushing of parts of the human body.

EN 418:1993 – Safety of Machinery - Emergency stop equipment, functional aspects - Principles for design

EN 12100-1:2003 – Safety of Machinery - Basic Concepts, general principles for design - Part 1: Basic Terminology, methodology

EN 12100-2:2003 – Safety of Machinery - Basic Concepts, general principles for design - Part 2: Technical Principles

EN ISO 4872:1978 – Acoustics - Measurement of Airborne noise emitted by construction equipment intended for outdoor use - Method for determining compliance with noise limits.

EN ISO 5349-1:2001 – Mechanical vibration. Measurement and evaluation of human exposure to hand-transmitted vibration. General requirements

EN ISO 5349-2:2001 – Mechanical vibration. Measurement and assessment of human exposure to hand-transmitted vibration. Practical guidance for measurement at the workplace.

Following the provisions of Directive(s) / Suivant les directive(s) déterminées / Volgens de vastgestelde richtlijnen / Siguiendo las directiva(s) / No seguimento das clausulas da Directiva(s) / Seguendo quanto indicato dalla Direttiva(s):

98/37/EC	Machinery Directive
2000/14/EC	Noise Directive
2001/95/EC	General Product Safety Directive
2002/95/EC	Reduction of Hazardous Waste Directive

— CONTRACTOR PROVEN EQUIPMENT SINCE 1946 —



170 Traders Blvd E
Mississauga, ON L4Z 1W7
Canada

4701 Allmond Avenue
Louisville, KY 40209
United States

200 Commerce Drive
Freehold, NJ 07728
United States

Honeyholes Lane
Dunholme, Lincoln LN2 3SU
United Kingdom

