

# Floor Grinders

P550Y / P650Y / P750Y





www.BartellGlobal.com

**CANADA**

170 Traders Blvd E  
Mississauga, Ontario L4Z 1W7  
TEL (647) 953-4100 FAX (647) 953-4101

**KENTUCKY**

4701 Allmond Ave  
Louisville, Kentucky 40209  
TEL (425) 405-9100 FAX (425) 405-9101

**UK**

Honeyholes Lane  
Dunholme, Lincoln, UK LN2 3SU  
TEL 01673 860709 FAX 01673 861119

**NEW JERSEY**

200 Commerce Drive, Unit A  
Freehold, New Jersey 07728  
TEL (848) 225-8100 FAX (848) 225-8101

**ORIGINAL LANGUAGE OPERATING MANUAL FOR  
BARTELL RIDE-ON TROWELS**

© 2023 Bartell Global Inc.

No part of this work may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, or by any information storage or retrieval system without the prior written permission of Bartell Morrison Inc. unless such copying is permitted by federal copyright laws.

**ADDRESS INQUIRIES OR REFERENCE PERMISSIONS CARE OF:**

Bartell Global, 170 Traders Blvd E., Mississauga, Ontario, Canada, L4Z  
1W7

REV.	DATE	DESCRIPTION	APPROVED BY:
0	10/18	Initial release	EC
1	12/21	Added flange assembly parts list	AN
2	08/23	Updated format, updated part numbers, Added Inverter code list	AN

## SAFETY PRECAUTIONS



### **DANGER**

#### **EXPLOSION HAZARD**

Never operate the machine in an explosive atmosphere, near combustible materials, or where ventilation does not clear exhaust fumes.



### **WARNING**

#### **BURN HAZARD**

Never come into contact with the engine or muffler when engine is operating or shortly after it is turned off. Serious burns may occur.



### **WARNING**

#### **ROTATING HAZARD**

Never place hands or feet inside safety guard rings. Serious injury will result from contact with rotating blades.



### **CAUTION**

#### **MOVING PARTS**

Before starting the machine, ensure that all guards and safety devices are in place and functioning properly.



### **ATTENTION**

#### **READ OWNER'S MANUAL**

Read and understand owner's manual before using this machine. Failure to follow operating instructions could result in serious injury or death.



## **TABLE OF CONTENTS**

<b>1.</b>	<b><u>ABOUT THIS MANUAL</u></b>	<b>4</b>
<b>2.</b>	<b><u>IMPORTANT SAFETY INSTRUCTIONS</u></b>	<b>4</b>
○	<b>SAFETY GUIDE</b>	<b>4</b>
○	<b>PRECAUTIONS</b>	<b>4</b>
<b>3.</b>	<b><u>TECHNICAL SPECIFICATIONS</u></b>	<b>5</b>
<b>4.</b>	<b><u>STARTUP PREPARATION</u></b>	<b>5</b>
<b>5.</b>	<b><u>OPERATING INSTRUCTIONS</u></b>	<b>6</b>
<b>6.</b>	<b><u>MAINTENANCE</u></b>	<b>6</b>
<b>7.</b>	<b><u>TROUBLESHOOTING</u></b>	<b>7</b>
<b>8.</b>	<b><u>PARTS BREAKDOWN</u></b>	<b>12</b>
<b>9.</b>	<b><u>WARRANTY</u></b>	<b>24</b>
	<b><u>DECLARATION OF CONFORMITY</u></b>	<b>25</b>



## **1. About This Manual**

This Manual contains the information and procedures to assist you to operate and maintain the P550Y, P650Y and P750Y floor grinder safely and correctly. Read this Manual before you operate or service the equipment. If you need additional information or assistance, please get in touch with our Customer Service Department:

Innovatech Products & Equipment Co.  
4701 Allmond Ave  
Louisville, KY 40209  
(425) 402-1881 or 800-267-6682  
Fax (425) 402-8547  
Email: [service@InnovatechProducts.com](mailto:service@InnovatechProducts.com)

## **2. Important Safety Instructions**

### **Safety Guide**

- The operator must wear waterproof and insulating work shoes and gloves.
- The external power cable must be 6-gauge wire (for the P750Y) or 8-gauge wire (P650Y & P550Y) and connected with the earth wire for electrical shock prevention.
- Make sure the power cables are not damaged or showing significant signs of wear.
- When wet grinding, waterproof protection should be installed for the water tank, inverter and control panel for preventing equipment failure and personal injury.
- Make sure not to run over the power cables while operating the machine. Doing so could result in equipment failure and personal injury.
- In all instances, make sure to have dry hands before inserting plugs to prevent injuries and/or death from electric shock.

### **Precautions**

- After dry or wet grinding, completely clean the tooling and grinding plates to increase the service life of your machine.
- Only dry grind while connected to a vacuum cleaner, so as to ensure dust-free operation. This will also decrease the load on the inverter.
- In the process of replacing consumables and transporting, please be sure to put down the equipment gently to prevent damage and oil leakage from the gearbox. Lifting handles are provided if one person can't easily carry the equipment alone.
- In a certain range of output frequency, the frequency inverter may produce a resonance which will cause the equipment to stop working. If such an event happens, avoid that resonant frequency.
- When grinding on a floor with large differences in floor height, be sure to grind from high to low to prevent damaging the grinding plates and gearbox.



### **3. Technical Specifications**

<b>Model</b>	<b>P550Y</b>	<b>P650Y</b>	<b>P750Y</b>
<b>Voltage</b>	220V	220V	480V
<b>Motor</b>	5hp, 3.7Kw	7.5hp, 5.6Kw	15hp, 11.2Kw
<b>Current</b>	17.6A	22A	22.3A
<b>Phase</b>	1-Phase	1-Phase	3-Phase
<b>Inverter</b>	5HP, 3.7Kw	15HP, 11.2Kw	15HP, 11.2Kw
<b>Frequency</b>	50/60HZ	50/60HZ	50/60HZ
<b>Twist Lock Plug</b>	30Amp NEMA L6-30P	50Amp CS8265C	50Amp CS8265C
<b>Disc speed</b>	0-1500 RPM	0-1500 RPM	0-1600 RPM
<b>Head Speed</b>	0-2000 RPM	0-1200 RPM	0-1800 RPM
<b>Display</b>	LED Digital	LED Digital	LED Digital
<b>Drive</b>	Steel Gear	Steel Gear	Steel Gear
<b>Grinding width</b>	550mm 21.7in	650mm, 25.7in	750mm, 29.5in
<b>Disc diameter</b>	230mm x3, 9in x3	250mm x3, 9.8in x3	250mm x3, 9.8in x3
<b>Water-tank</b>	30L, 7.9 gal	30L, 7.9 gal	30L, 7.9 gal
<b>Vacuum Port</b>	50mm, 2in	50mm, 2in	50mm, 2in
<b>Dimensions</b>	38.2in x 21.7in x 33.5in	38.2in x 25.7in x 37.4in	38.2in x 29.5in x 41.3in
	970mm x 550mm x 850mm	970mm x 650mm x 950mm	970mm x 750mm x 1050mm
<b>Weight</b>	180KG, 369lb	300KG, 660lb	330KG, 726lb
<b>Additional Weight</b>	Included	Included	Included
<b>Handle</b>	Adjustable	Adjustable	Adjustable
<b>Lifting Hooks</b>	No	Yes	Yes
<b>Work Light</b>	Bright LED	Bright LED	Bright LED
<b>Tooling Plate</b>	Slide Mag / 3 Hole	Slide Mag / 3 Hole	Slide Mag / 3 Hole
<b>Oil capacity- gal (L)</b>	1.32 (5)	1.85 (7)	2.11(8)

### **4. Startup Preparation**

- 1) Ensure the power switch is in the off position.
- 2) Lean the machine backwards until it is safely resting on the ground to attach the grinding tools.
- 3) Ensure the tooling is secured tightly before lifting the machine back into its upright position.
- 4) Adjust the angle of the main handle arm by pulling the swing arm and rotating the main handle to the one of the positions on the
- 5) Tighten the handle by rotating it clockwise to the desired location and then tightening the black rotary handle.



## 5. Operating Instructions

Before starting:



1. Ensure the power switch is in the off position.
2. Check the surrounding area for any loose material including bolts/screws/nails that could get caught in the machine.
3. Lean the machine backwards until it is safely resting on the ground to attach the grinding tools.
4. Connect the power supply, checking that the display on the inverter box is not displaying any errors and is giving a voltage reading within the expected range.
5. If you are dry grinding, connect the appropriate vacuum and start the vacuum before the grinder.

Starting the machine:

1. Press the green power button on the control panel to start the machine.
2. Turn the rotation knob to "Forward" or "Reverse" to determine the rotation of the gearbox. Note that the grinding heads will rotate in the direction opposite that of the gearbox.

## 6. Maintenance

- When dry-grinding, is it best to use a vacuum hose with a diameter of 50mm.
- Clean the dust filter in the inverter box every 20 days, unless there is no vacuum attached, in which case clean the inverter and filter every 2 days.
- Change the gear oil after grinding 1000 m<sup>2</sup>, 6 months after purchase, and then every 6 months after that. General industrial 150 gear oil is recommended.
- Keep the motor ventilation hole open.
- Do not remove the gearbox by yourself unless in an emergency, contact your seller.

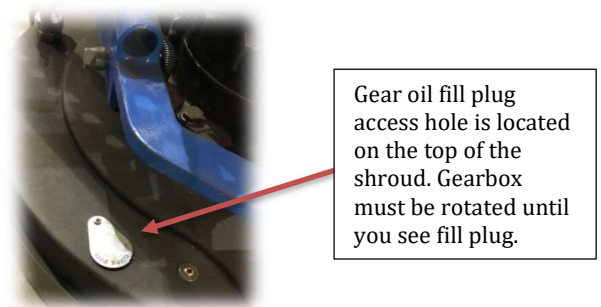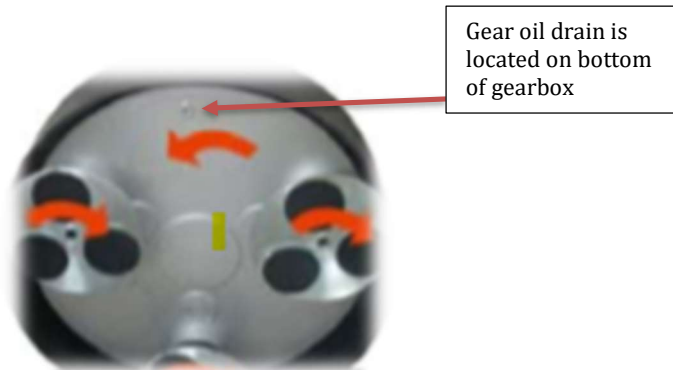



## 7. Troubleshooting

Problem	Potential Cause	Solution
Machine stops during operation	Low current	Check power connections
	Low current	Undersized power cable
	Loose connections	Check power connections
	Water damage to connections	Check power connections
	Low voltage	Turn off power, wait 3 min
	High voltage	Turn off power, wait 3 min

### Inverter Fault Codes

Fault Code	Fault Name	Possible reasons of fault	Possible solutions
-Lu-	DC bus undervoltage	<ul style="list-style-type: none"> <li>At the beginning of powering on and at the end of powering off</li> <li>Input voltage is too low</li> <li>Improper wiring leads to undervoltage of hardware</li> </ul>	<ul style="list-style-type: none"> <li>It is normal status of powering on and powering off</li> <li>Please check input power voltage</li> <li>Please check wiring and wire the inverter properly</li> </ul>
E0001	Inverter output overcurrent (in acceleration process)	<ul style="list-style-type: none"> <li>Improper connection between inverter and motor</li> <li>Improper motor parameters</li> <li>The rating of the used inverter is too small</li> <li>Acceleration/deceleration time is too short</li> <li>Instant stop occurs, the running motor is restarted</li> </ul>	<ul style="list-style-type: none"> <li>Connect the inverter and motor properly</li> <li>Please set correct motor parameters (F08.00-F08.04, F13.01-F13.05)</li> <li>Select inverter with higher rating</li> <li>Please set proper acceleration time and deceleration time (F03.01-F03.08)</li> <li>Please set start mode to be speed tracking (F02.00=2)</li> </ul>
E0002	Inverter output overcurrent (in deceleration process)		
E0003	Inverter output overcurrent (in constant speed process)		
E0004	DC bus over voltage (in acceleration process)	<ul style="list-style-type: none"> <li>Input voltage is too high</li> <li>Deceleration time is too short</li> <li>Improper wiring leads to overvoltage of hardware</li> <li>Instant stop occurs, the running motor is restarted</li> <li>Improper selection of the braking devices</li> </ul>	<ul style="list-style-type: none"> <li>Please check power input</li> <li>Please set a proper value for deceleration time (F03.02, F03.04, F03.06, F03.08)</li> <li>Please check wiring and wire the inverter properly</li> <li>Please set start mode to be speed tracking (F02.00=2)</li> <li>Select according to the recommended braking devices of user manual</li> </ul>
E0005	DC bus over Voltage (in deceleration process)		
E0006	DC bus over Voltage (in constant speed process)		





E0007	Stall overvoltage	<ul style="list-style-type: none"> <li>• Bus voltage is too high</li> <li>• The setting of stall overvoltage is too low.</li> </ul>	<ul style="list-style-type: none"> <li>• Please check power input or the function of brake</li> <li>• Set the value of stall overvoltage properly</li> </ul>
E0008	Fault of power module	<ul style="list-style-type: none"> <li>• Short circuit between phases output</li> <li>• Short circuit to the ground</li> <li>• Output current is too high</li> <li>• Power module is damaged</li> </ul>	<ul style="list-style-type: none"> <li>• Please check the connection and connect the wire properly</li> <li>• Please check the connection and connect the wire properly</li> <li>• Please check the connection and mechanism</li> <li>• Please contact the supplier for repairing</li> </ul>
E0009	Heatsink overheat	<ul style="list-style-type: none"> <li>• Ambient temperature is too high</li> <li>• Inverter external ventilation is not good</li> <li>• Fan fault</li> <li>• Fault occurs to temperature detection circuit</li> </ul>	<ul style="list-style-type: none"> <li>• Please use inverter with higher power capacity</li> <li>• Improve the ventilation around the inverter</li> <li>• Replace the cooling fan</li> <li>• Please seek technical support</li> </ul>
E0010	Fault of braking unit	<ul style="list-style-type: none"> <li>• Circuit fault of braking unit</li> </ul>	<ul style="list-style-type: none"> <li>• Please seek technical support</li> </ul>
E0011	CPU fault	<ul style="list-style-type: none"> <li>• CPU abnormal</li> </ul>	<ul style="list-style-type: none"> <li>• Please detect at power on after completely power outage</li> <li>• Please seek technical support</li> </ul>
E0012	Parameters auto-tuning fault	<ul style="list-style-type: none"> <li>• Parameter auto-tuning is time out</li> </ul>	<ul style="list-style-type: none"> <li>• Please check the motor's connection</li> <li>• Input the correct motor parameters (F08.00-F08.04, F13.01-F13.05)</li> <li>• Please seek technical support</li> </ul>



E0013	Contactors not actuated	<ul style="list-style-type: none"> <li>• Contactor fault</li> <li>• Fault of control circuit</li> </ul>	<ul style="list-style-type: none"> <li>• Replace the contactor</li> <li>• Please seek technical support</li> </ul>
E0014	Fault of current detection circuit	<ul style="list-style-type: none"> <li>• Current detection circuit is damaged</li> </ul>	<ul style="list-style-type: none"> <li>• Please contact the supplier for repairing</li> </ul>
E0015	Fault of input phase	<ul style="list-style-type: none"> <li>• For three-phase input inverter, input phase loss fault occurs to power input</li> </ul>	<ul style="list-style-type: none"> <li>• Please check the three-phase power input</li> <li>• Please seek technical support</li> </ul>
E0016	Fault of output phase	<ul style="list-style-type: none"> <li>• Output phase disconnection or loss</li> <li>• Heavy imbalance of inverter's three-phase load</li> </ul>	<ul style="list-style-type: none"> <li>• Please check the connection between inverter and motor</li> <li>• Please check the quality of motor</li> </ul>
E0017	Inverter overload	<ul style="list-style-type: none"> <li>• Acceleration time is too short</li> <li>• Improper setting of V/f curve or torque boost leads to over current</li> <li>• Instant power-off occurs, the running motor is restarted</li> <li>• Mains supply voltage is too low</li> <li>• Motor load is too high</li> </ul>	<ul style="list-style-type: none"> <li>• Adjust acceleration time (F03.01, F03.03, F03.05, F03.07)</li> <li>• Adjust V/f curve (F09.00-F09.06) or torque boost (F09.07, F09.08)</li> <li>• Please set start mode to be speed tracking (F02.00=2)</li> <li>• Please check mains supply voltage</li> <li>• Please use inverter with proper power rating</li> </ul>
E0018	Inverter output is unloaded	<ul style="list-style-type: none"> <li>• Load disappeared or comes down suddenly</li> <li>• Parameters are not set properly</li> </ul>	<ul style="list-style-type: none"> <li>• Please check load and mechanical transmission devices</li> <li>• Please set the parameters properly (F20.03-F20.05)</li> </ul>



E0019	Motor overload	<ul style="list-style-type: none"> <li>• Improper setting of V/f curve</li> <li>• Mains supply voltage is too low</li> <li>• Normal motor runs for a long time with heavy load at low speed</li> <li>• Motor's overload protection factor is not set properly</li> <li>• Motor runs with blocked torque or load is too heavy</li> </ul>	<ul style="list-style-type: none"> <li>• Adjust the setting of V/f curve (F09.00-F09.06)</li> <li>• Check the power input</li> <li>• Please use special motor if the motor needs to operate for a long time with heavy load</li> <li>• Please properly set the overload protection factor of the motor</li> <li>• Please check the load and mechanical transmission devices</li> </ul>
E0020	Motor overheats	<ul style="list-style-type: none"> <li>• Motor overheats</li> <li>• The setting of motor parameters is incorrect</li> </ul>	<ul style="list-style-type: none"> <li>• Reduce the load; Repair or replace the motor; Increase the acceleration/deceleration time (F03.01-F03.08)</li> <li>• Set the motor parameter (F08.00-F08.04, F13.01-F13.05)</li> </ul>
E0021	Access fault of Control board EEPROM	<ul style="list-style-type: none"> <li>• Memory circuit fault of control board EEPROM</li> </ul>	<ul style="list-style-type: none"> <li>• Please contact the supplier for repairing</li> </ul>
E0022	Access fault of display panel EEPROM	<ul style="list-style-type: none"> <li>• Memory circuit fault of display panel EEPROM</li> </ul>	<ul style="list-style-type: none"> <li>• Replace the display panel</li> <li>• Please contact the supplier for repairing</li> </ul>
E0023	Fault setting of parameters	<ul style="list-style-type: none"> <li>• The power rating between motor and inverter are too different</li> <li>• Improper setting of motor parameters</li> </ul>	<ul style="list-style-type: none"> <li>• Select an inverter with suitable power rating</li> <li>• Please set correct value of motor parameters (F08.00-F08.04, F13.01-F13.05)</li> </ul>
E0024	Fault of external equipment	<ul style="list-style-type: none"> <li>• Fault terminal of external equipment operates</li> </ul>	<ul style="list-style-type: none"> <li>• Please check external equipment</li> </ul>



Page Intentionally Left Black


## **8. Parts Breakdown**





## 02.P550Y Control Box


Item No.	Part Number	Description	Qty.
201	832-0028	Operator Handle 550Y	1
202	832-0004	Speed Button	1
203	832-0002	Instruction Button- Set of 2- Red/Green	2
204	832-0003	Reversible Button	1
205	832-0016	Inverter Display	1
206	832-0001	Without Inverter Display	N/A

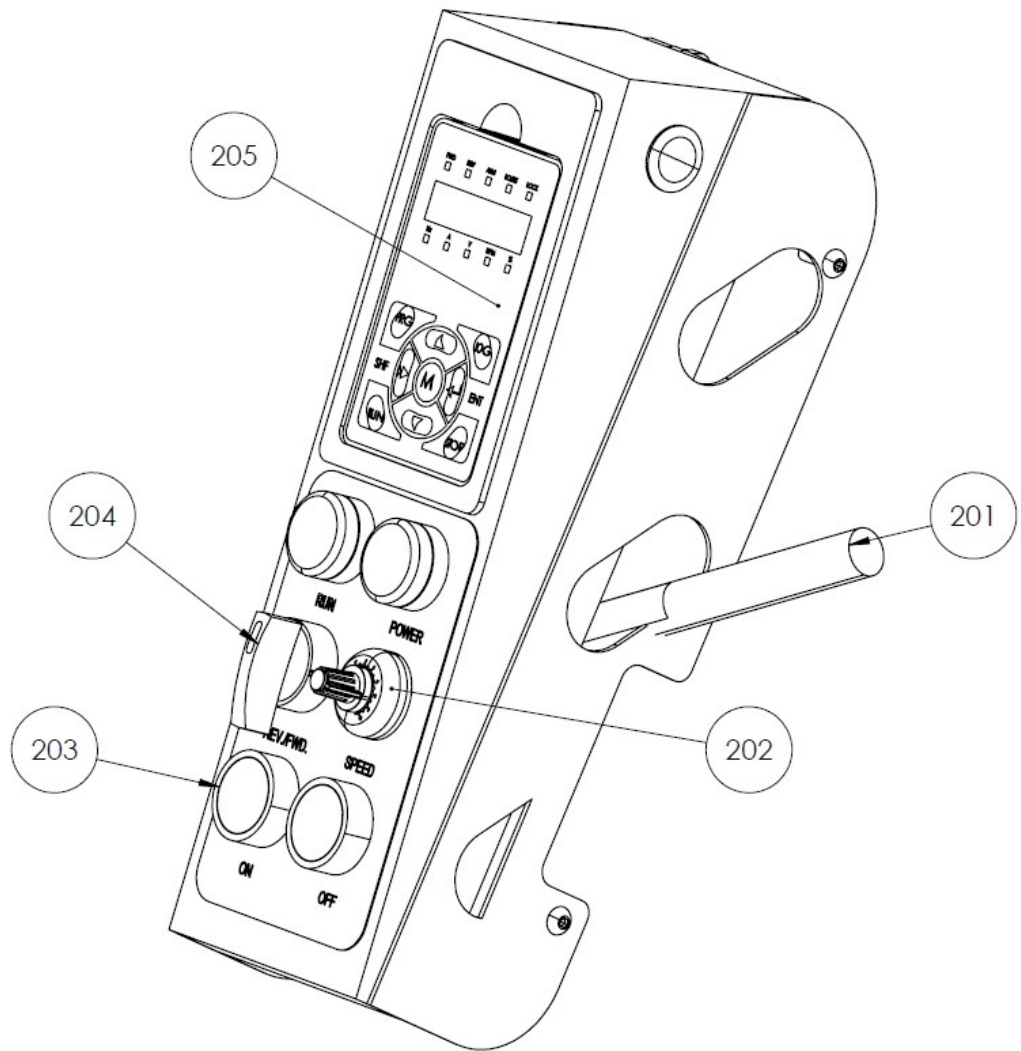



### 03.P550Y Head Flange Assembly

Item No.	Part Number	Description	Qty.
1	35003	P550 Tooling Plate	1
2	35832-0006	Rubber Mount	1
3	35832-0050	Upper Flange	1
4	35832-0051	Lower Flange	1
5	35832-0069	Key, 8mm x 7mm x 17mm	2
6	35832-0070	Washer, 17mm ID, 45mm OD	1
7	12930	Washer, 7/16" Diameter	6
8	60138	Locknut, M16-2.0	1
9	10955	HHCS, M12-1.25 x 40mm	6
10	35832-0082	Spring	1
11	35201	FHSCS, M10-1.5 x 25mm	3
12	35832-0064	P550 Flange Assembly	1

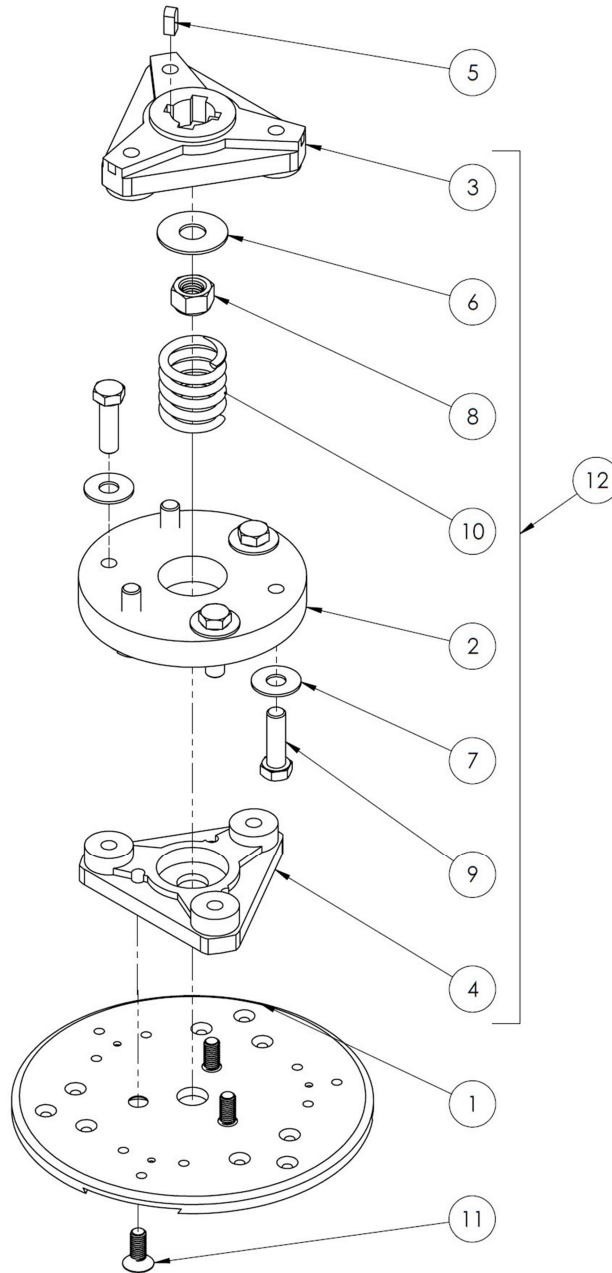






# 01.P650Y Grinder Assembly


Item No.	Part Number	Description	Qty.
101	832-0023	P650Y Plastic Shroud	1
102	832-0006	Rubber Coupler	3
103	35004	P650Y Tooling Plate	3
104	832-0012	P650Y Wheel	2
105	832-0011	Water Valve	1
106	832-0014	P650Y Inverter	1
107	832-0009	P650Y Handle Adjustment Screw	1
108	832-0026	P650Y Motor, 7.5 kW	1
109	832-0038	P650Y Metal Cage	1
110	832-0021	Headlight	1

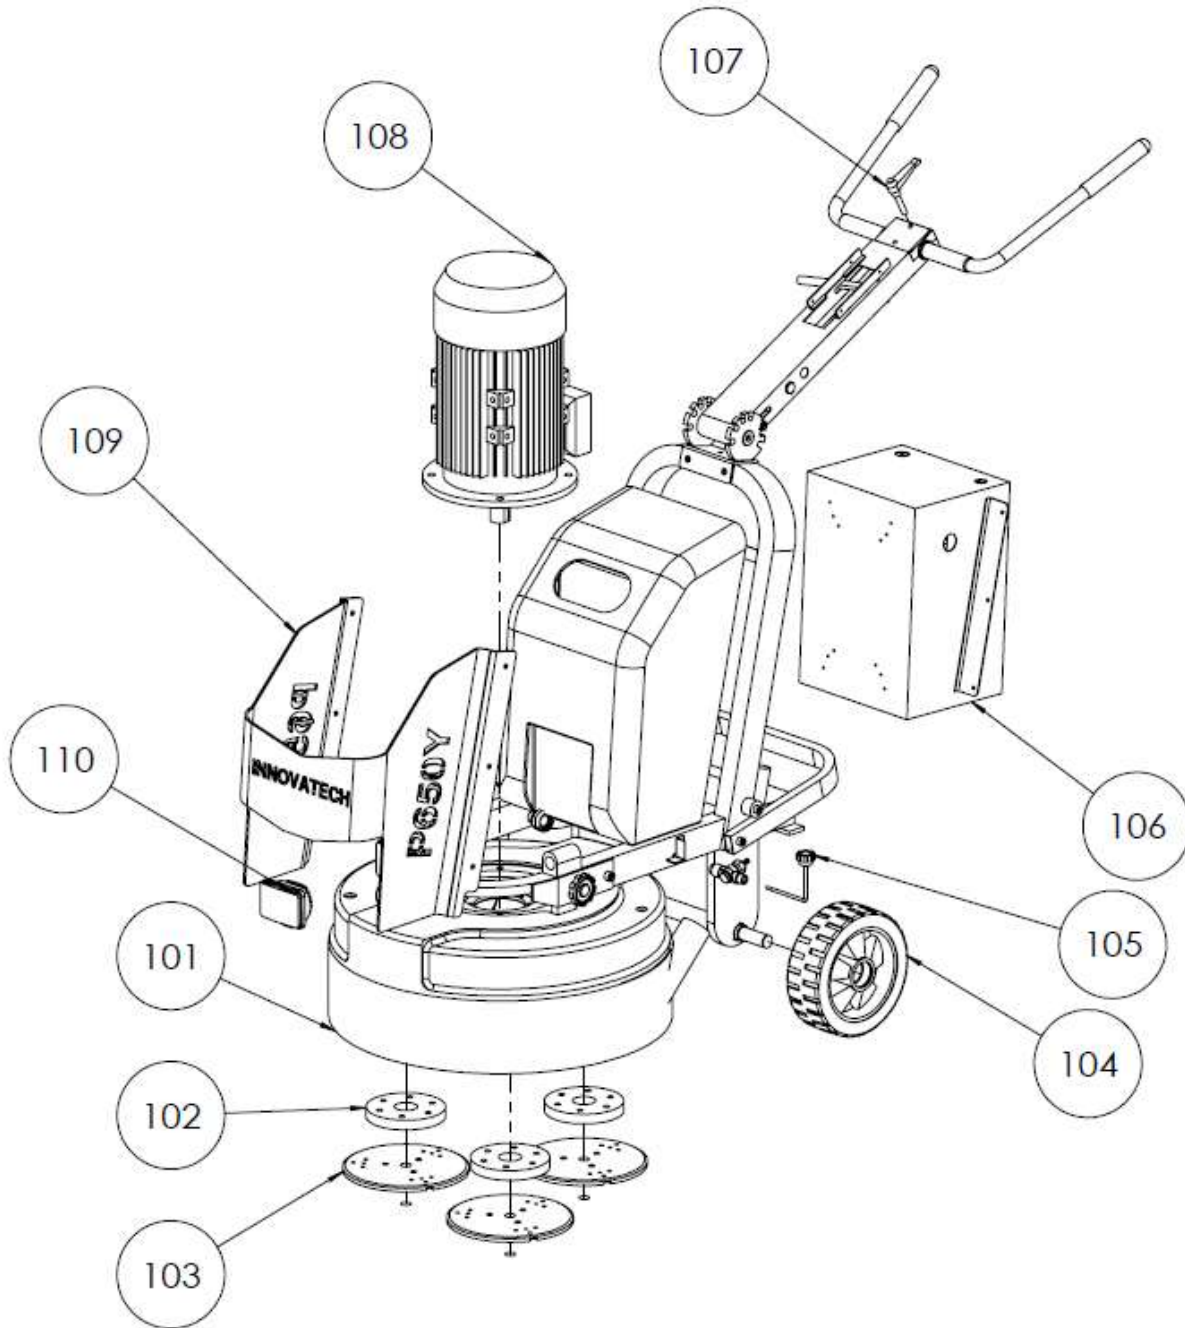



## 02.P650Y Control Box


Item No.	Part Number	Description	Qty.
201	832-0029	Operator Handle 650Y	1
202	832-0004	Speed Button	1
203	832-0002	Instruction Button- Set of 2- Red/Green	2
204	832-0003	Reversible Button	1
205	832-0016	Inverter Display	1
206	832-0001	Without Inverter Display	N/A

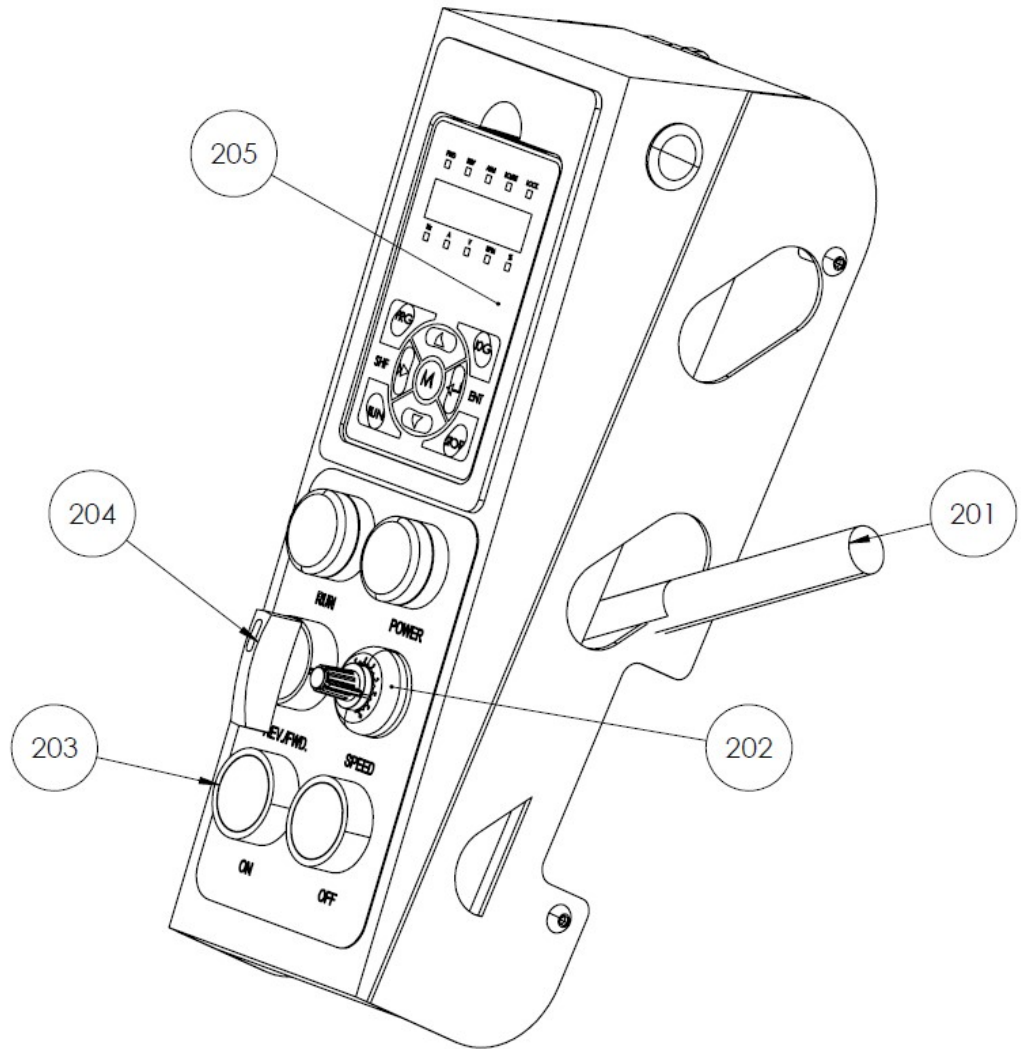



### 03.P650Y Head Flange Assembly


Item No.	Part Number	Description	Qty.
1	35004	P650/750 Tooling Plate	1
2	35832-0006	Rubber Mount	1
3	35832-0050	Upper Flange	1
4	35832-0051	Lower Flange	1
5	35832-0069	Key, 8mm x 7mm x 17mm	2
6	35832-0070	Washer, 17mm ID, 45mm OD	1
7	12930	Washer, 7/16" Diameter	6
8	60138	Locknut, M16-2.0	1
9	10955	HHCS, M12-1.25 x 40mm	6
10	35832-0060	Spring	1
11	35201	FHSCS, M10-1.5 x 25mm	3
12	35832-0064	P650 Flange Assembly	1

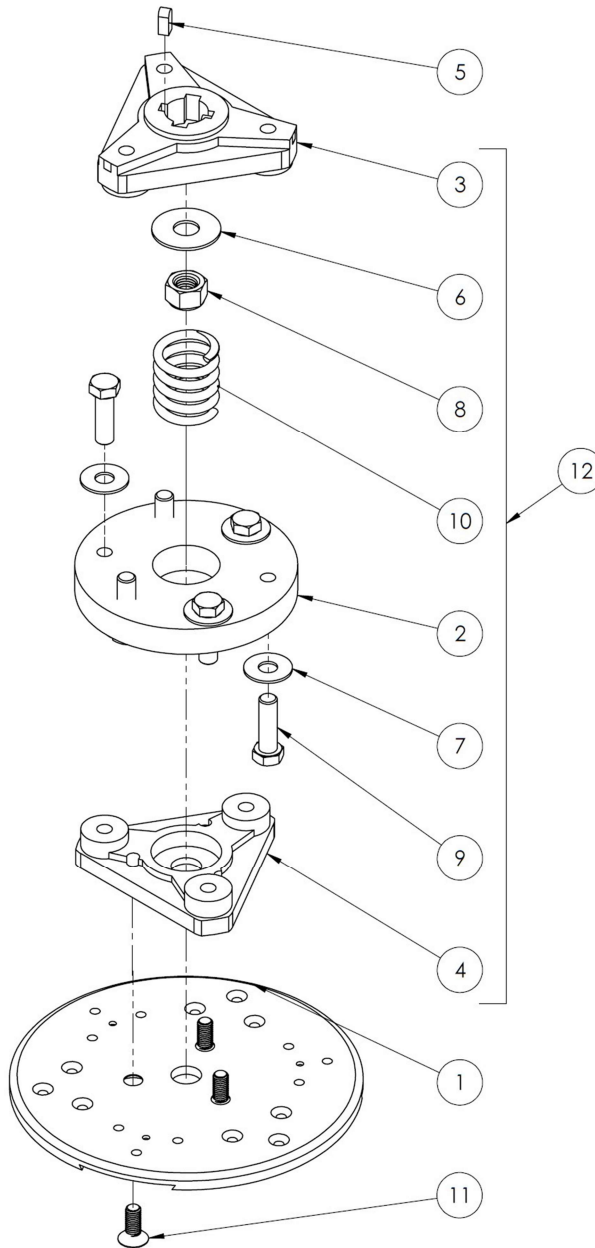



## 01.P750Y Grinder Assembly


Item No.	Part Number	Description	Qty.
101	832-0024	P750Y Plastic Shroud	1
102	832-0005	Rubber Mount	3
103	35004	P750Y Tooling Plate	3
104	832-0012	P750Y Wheel	2
105	832-0011	Water Valve	1
106	832-0015	P750Y Inverter	1
107	832-0009	P750 Handle Adjustment Screw	1
108	832-0027	P750Y Motor, 11 kW	1
109	832-0039	P750Y Metal Cage	1
110	832-0021	Headlight	1

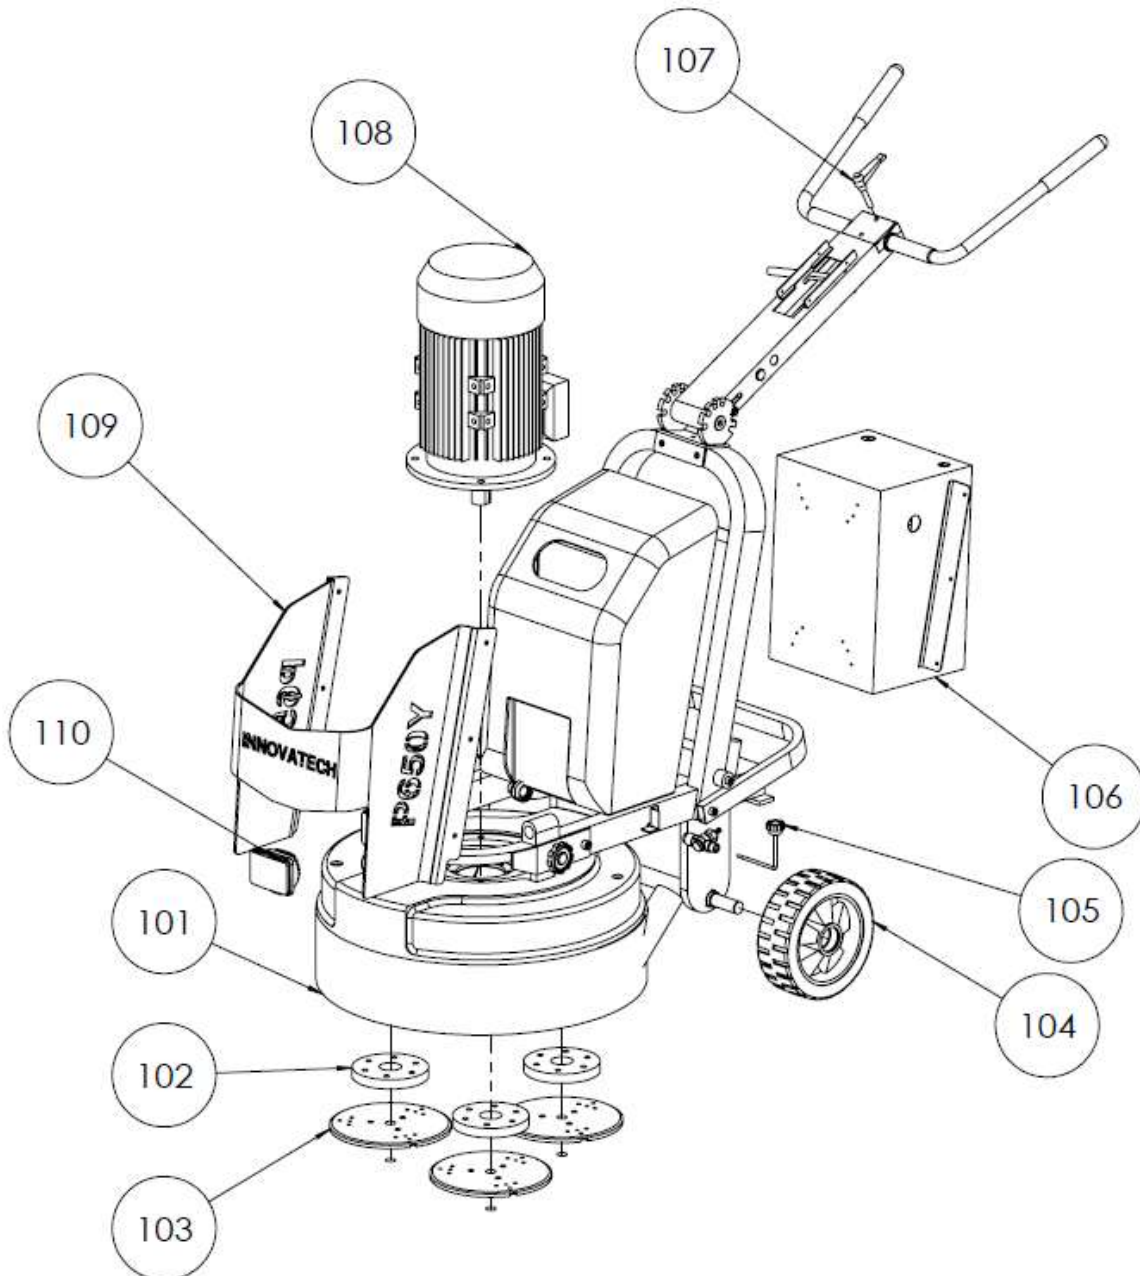



## 02.P750Y Control Box


Item No.	Part Number	Description	Qty.
201	832-0030	Operator Handle 750Y	1
202	832-0004	Speed Button	1
203	832-0002	Instruction Button- Set of 2- Red/Green	2
204	832-0003	Reversible Button	1
205	832-0016	Inverter Display	1
206	832-0001	Without Inverter Display	N/A

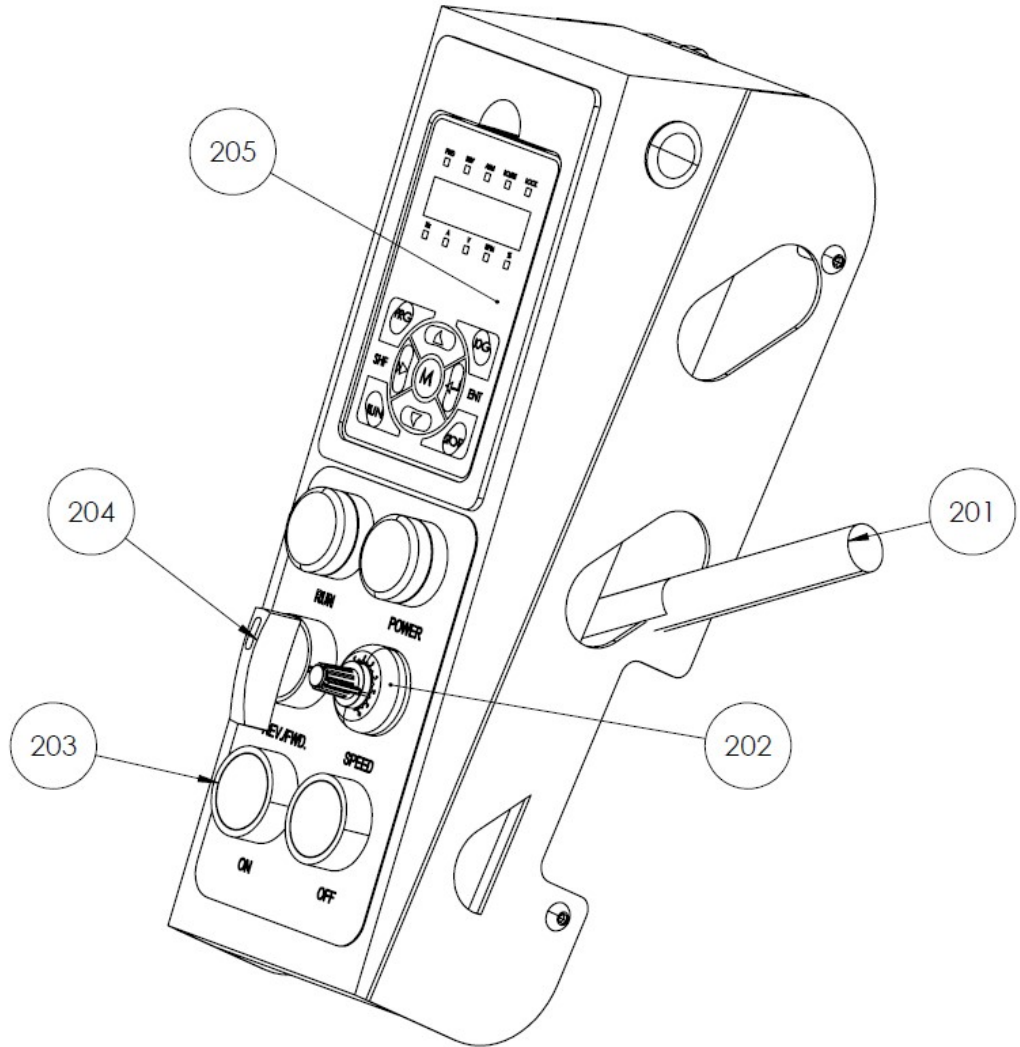




### 03.P750Y Head Flange Assembly


Item No.	Part Number	Description	Qty.
1	35004	P650/750 Tooling Plate	1
2	35832-0062	Lower Flange	1
3	35832-0005	Rubber Mount	1
4	35832-0060	Spring	1
5	35832-0061	Upper Flange	1
8	10955	HHCS, M12-1.25 x 40mm	6
9	12930	Washer, 7/16"	6
10	35201	FHSCS, M10-1.5 x 25mm	3
11	20366	Washer, 18mm ID x 50mm OD	1
12	35832-0071	Key, 10mm x 8mm x 28mm	2
13	31285	Nut, M18	1
14	35832-0063	P750 Flange Assembly	1

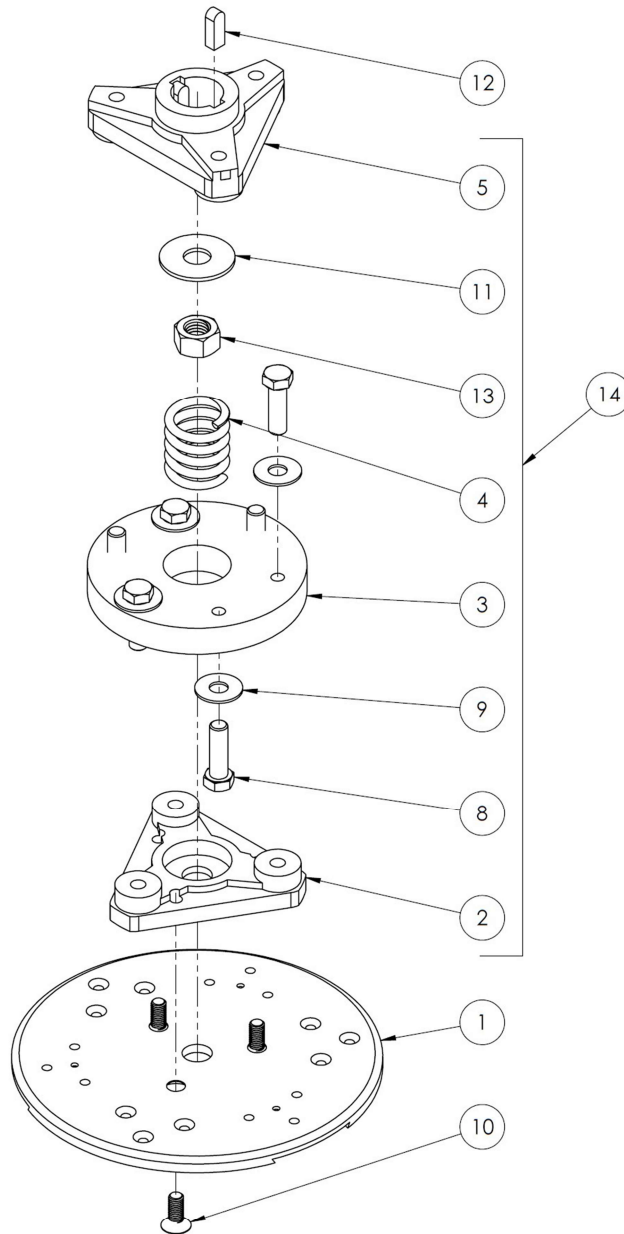

## Wiring Diagram P550,P650 1PHASE

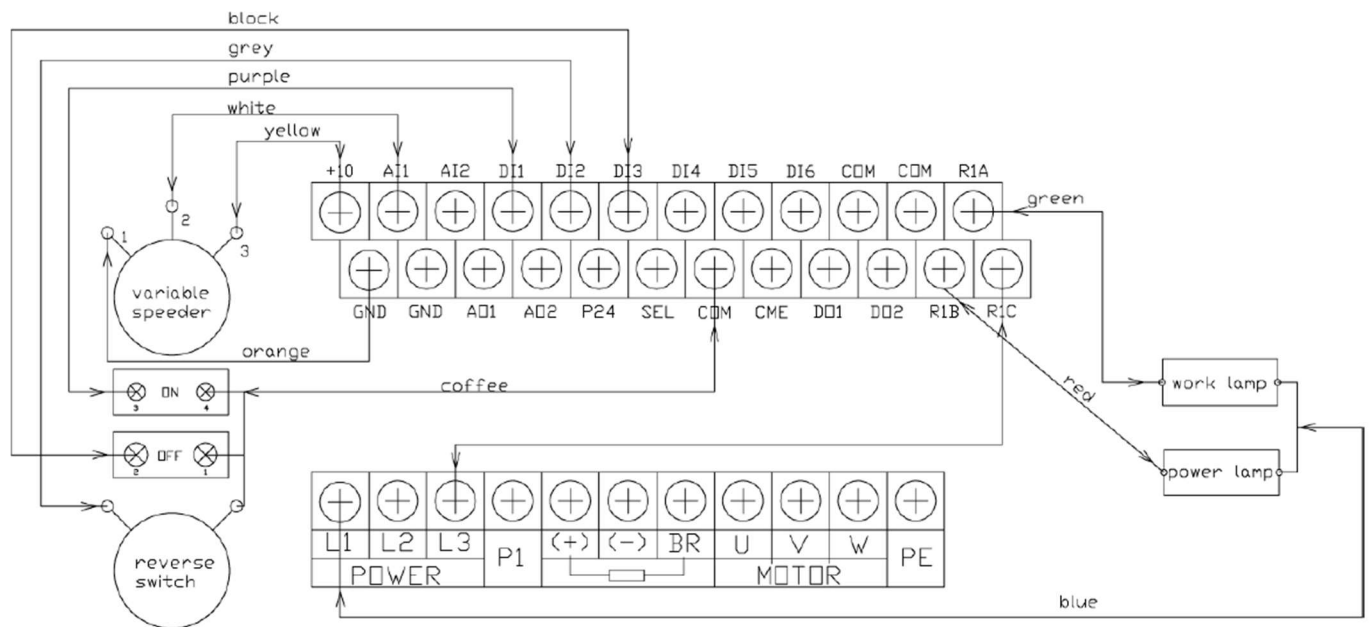

## Wiring Diagram P750 3PHASE

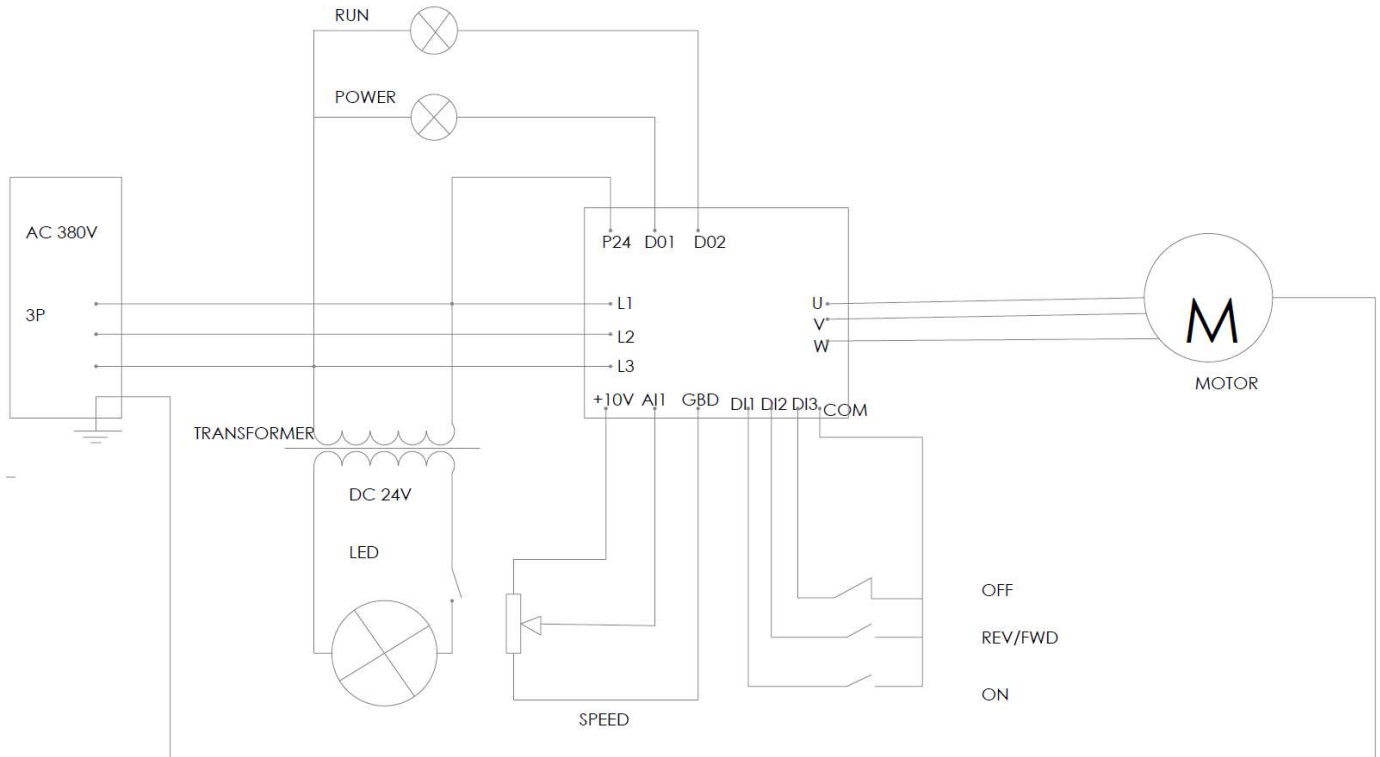





## **9. Warranty**

Innovatech warrants to the original buyer, for a period of one (1) year or 300 operating hours (whichever comes first) from the date of delivery, that the Equipment is free from defects in materials and workmanship and that the Equipment conforms to the operating specifications supplied with the Equipment. The foregoing warranty is subject to proper operation and maintenance of the Equipment in accordance with the operating instruction and manual supplied to Buyer with the Equipment.

Warranty claims shall be made by Buyer in writing. Innovatech's sole obligation under the foregoing warranty, where it appears to Innovatech's satisfaction that the defect was present at the time of delivery, is at Innovatech's sole option, to repair, replace or correct any such defect.

EXCEPT AS STATED ABOVE THERE ARE NO WARRANTIES, EXPRESS OR IMPLIED. INNOVATECH EXPRESSLY DISCLAIMS ANY WARRANTY, EXPRESS OR IMPLIED, THAT EQUIPMENT SOLD HEREUNDER IS OF MERCHANTABLE QUALITY OR THAT IT CAN BE USED FOR OR IS FIT FOR ANY PARTICULAR PURPOSE. ANY DESCRIPTION OF THE EQUIPMENT IN THIS AGREEMENT OR IN MANUALS, BROCHURES OR LITERATURE AND ANY USE OF ANY SAMPLE, MODEL OR PROTOTYPE OF THE EQUIPMENT IS FOR THE SOLE PURPOSE OF IDENTIFYING OR ILLUSTRATING THE EQUIPMENT, IS NOT PART OF THE BASIS OF THE AGREEMENT BETWEEN INNOVATECH AND BUYER, AND DOES NOT CONSTITUTE A WARRANTY THAT THE EQUIPMENT, AS SUPPLIED, WILL CONFORM TO ANY DESCRIPTION OR TO ANY SAMPLE, MODEL OR PROTOTYPE. INNOVATECH DISCLAIMS ANY WARRANTY RESPECTING OPERATING CAPACITY OR CAPABILITY OF THE EQUIPMENT OR THE ABILITY OF THE EQUIPMENT TO MEET ANY PARTICULAR NEEDS OF THE BUYER. THE EQUIPMENT IS POWERED TO OPERATE AS STATED IN THE OPERATING SPECIFICATIONS SUPPLIED WITH THE EQUIPMENT, BUT IT IS UNDERSTOOD AND AGREED TO BUY BUYER THAT ACTUAL OPERATING CAPABILITIES VARY UNDER DIFFERENT OPERATING CONDITIONS FOR WHICH INNOVATECH CAN ASSUME NO RESPONSIBILITY.

BUYER'S EXCLUSIVE REMEDY FOR CLAIMS ARISING UNDER THIS AGREEMENT SHALL BE FOR REPAIR OR, AT INNOVATECH'S SOLE OPTION, REPLACEMENT OF ANY ITEM OF DEFECTIVE EQUIPMENT. INNOVATECH'S LIABILITY FOR ANY LOSSES OR DAMAGE, WHETHER ON ACCOUNT OF NEGLIGENCE, BREACH, AND WARRANTY OR OTHERWISE SHALL IN NO EVENT EXCEED THE PURCHASE PRICE OF THE PARTICULAR ITEM OF EQUIPMENT WITH RESPECT TO WHICH SUCH LOSSES OR DAMAGE OCCURRED.

IN NO EVENT WILL INNOVATECH BE LIABLE FOR ANY DAMAGES CAUSED BY BUYER'S FAILURE TO PERFORM BUYER'S RESPONSIBILITIES, OR FOR ANY LOST PROFITS, LOST PRODUCTION, LOSS OF ANTICIPATED PROFITS OF OTHER INCIDENTAL OR CONSEQUENTIAL DAMAGES, EVEN IF INNOVATECH HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

IN NO EVENT WILL INNOVATECH BE LIABLE FOR ANY DAMAGES RESULTING FROM ANY CLAIM AGAINST BUYER BY ANY OTHER PARTY.

### **FACTORY SERVICE**

A warranty will not be valid unless a written claim authorization comes with returned parts. Innovatech will not provide for any shipping costs for items returned for repair. To obtain warranty repairs, buyer must prepay shipment and return all warranty parts to Innovatech. Damage occurring during shipment is deemed the responsibility of the carrier and claims should be made directly with such carrier.

It will be the customer's responsibility to pay for any non-warranty replacement parts plus the current hourly labor rates for any work done on any machine or part. Service is available upon request; call Innovatech for current labor rates.



## **DECLARATION OF CONFORMITY**

### **CERTIFICAT DE CONFORMITÉ / GELIJKVORMIGHEIDS CERTIFICAAT / DECLARACIÓN DE CONFORMIDAD / DECLARAÇÃO DE CONFORMIDADE / DICHIARAZIONE DI CONFORMITA**

**We:** **Innovatech Products**  
4701 Allmond Ave  
Louisville, Kentucky, USA  
40209  
Tel: (425) 405-9100  
Toll Free: (800) 267-6682  
Fax: (425) 405-9108

Declare under our  
relates is in conformity  
Déclarons sous  
conforme aux

sole responsibility that the product to which this declaration  
with the following standard(s) or other normative documents.  
notre responsabilité que le produit cette déclaration est  
normes suivantes ou d'autres documents habituels.

Verklaren onder onze verantwoordelijkheid dat het product naar welke de verklaring verwijst conform de volgende standaards of anders  
gebruikelijke documenten is.

Declaramos bajo nuestra única responsabilidad que el producto en lo que esta declaración concierne, es conforme con la siguiente  
normativa u otros documentos.

Declara sob sua responsabilidade que o produto a quem esta declaração interessar, está em conformidade com os seguintes  
documentos legais ou normas directivas.

Dichiariamo sotto la ns. unica responsabilità che il prodotto al quale questa dichiarazione si riferisce, è fabbricato in conformità ai  
seguenti standard e documenti di normative.

EN 349:1993	Safety of Machinery - Minimum gaps to avoid crushing of parts of the human body.
EN 418:1993	Safety of Machinery - Emergency stop equipment, functional aspects - Principles for design
EN 12100-1:2003	Safety of Machinery - Basic Concepts, general principles for design - Part 1: Basic Terminology, methodology
EN 12100-2:2003	Safety of Machinery - Basic Concepts, general principles for design - Part 2: Technical Principles
EN ISO 4872:1978	Acoustics - Measurement of Airborne noise emitted by construction equipment intended for outdoor use - Method for determining compliance with noise limits.
EN ISO 5349-1:2001	Mechanical vibration. Measurement and evaluation of human exposure to hand-transmitted vibration. General requirements
EN ISO 5349-2:2001	Mechanical vibration. Measurement and assessment of human exposure to hand-transmitted vibration. Practical guidance for measurement at the workplace.

Following the provisions of Directive(s):

Suivant les directive(s) déterminées:

Volgens de vastgestelde richtlijnen:

Siguiendo las directiva(s):

No sequimento das clausulas da Directiva(s):

Seguendo quanto indicato dalla Direttiva(s):

98/37/EC	Machinery Directive
2000/14/EC	Noise Directive
2001/95/EC	General Product Safety Directive
2002/95/EC	Reduction of Hazardous Waste Directive



Technical Characteristics:

Caractéristiques techniques:

Technisch gegevens:

Características Técnicas:

Características Técnicas:

Qualitäts di tecnico:

Model Modéle Type Modelo Modelo Modello	MachineSerial Number Numéro de Série machine Serienummer machine Máquina número de série Numero de serie da maquina Numero di seria la macchina	Engine Serial Number Numéro de Série moteur Serienummer motor Motor número de série Numero de serie do motor Numero di seria la motore	Weight Masse Gewicht Masa Massa Massa
YGRINDERS			

Noise Level Puissance acoustique Geluidniveau Nivel Sonoro Nivel del Ruido	Pressure level Pression acoustique Geluidsdrkniveau Nivel Acustico Pressão Acústica	Vibration level Niveau de vibration Vibratieniveau Nivel de Vibracion Nivel de Vibração
Lwa (dB)	Lpa (Db)	ahv (m/s <sup>2</sup> )

EN Signature of Authorized Person:  
FR Signature de la personne autorisée:  
NL Handtekening van gemachtigd persoon:  
ES Firma de la persona autorizada:  
PT Assinatura de pessoa autorizada:  
IT Firma della persona autorizzata:  
DE Unterschrift der verantwortlichen Person:

Eric Campbell  
Engineering Manager

11/24/2023  
Louisville, Kentucky



170 Traders Blvd E  
Mississauga, ON L4Z 1W7  
Canada

4701 Allmond Avenue  
Louisville, KY 40209  
United States

200 Commerce Drive  
Freehold, NJ 07728  
United States

Honeyholes Lane  
Dunholme, Lincoln LN2 3SU  
United Kingdom

